

## SLIDING PLEXIGLASS FRONT MODELS

1. If equipped with lock, unlock cabinet and slide plexiglass front out from the top.
2. **SURFACE MOUNT:** Place cabinet in position level to floor, and mark location of attachments on studding using 3/16" (5mm) holes as marking guides.
3. **RECESSED:** Frame in above, below and at both sides of the cabinet opening. **Note:** On load bearing walls, the studs must be doubled on either side of the cabinet tub. If a stud must be cut to install the cabinet, a load bearing header must be installed above the cabinet tub.
3. Remove cabinet and drill 5/32" (4mm) holes through studs at marked points. Cabinet must be attached by at least 4 points, 2 of which must be in framing members. Install plastic wall anchors in no more than 2 places if needed. For masonry walls, install expansion shields in wall at marked points.
4. Place cabinet in position and attach with Universal #10 x 2 1/2" (64mm) self-drilling screws.
5. Remove protective plastic from plexiglass and install decal if included.
6. Place fire extinguisher in cabinet
7. Insert plexiglass.
8. If provided, attach chain to hammer and attach to cabinet as indicated. Lock cabinet if lock provided.

## HINGED DOOR MODELS - SURFACE-MOUNT

1. Remove all hardware and glazing, unlock cabinet if lock provided.
2. Place cabinet in position level to floor, and mark location of attachments on studding using 3/16" (5mm) holes as marking guides. Cabinet must be attached by at least 4 points, 2 of which must be in framing members.
3. Remove cabinet and drill 5/32" (4mm) holes through studs at marked points. Install plastic wall anchors in no more than 2 places if needed. For masonry walls, install expansion shields in wall at marked points.
4. Place cabinet in position and attach with Universal #10 x 2 1/2" (64mm) self-drilling screws, or for masonry, appropriate screws for expansion shield.
5. Remove protective plastic from plexiglass or glass and install decal if intended for glass. (Panorama Models Glazing is Pre-Installed)
6. Align glazing on inside of door, holding in place while installing glass mounting clips on inside of door. Do not over-tighten.
7. Install handle and roller catch or SAF-T-LOK™ in door.
8. Place fire extinguisher in cabinet
9. If provided, attach chain to hammer and attach to cabinet as indicated. Lock cabinet if lock provided.

## HINGED DOOR MODELS - RECESSED

1. Remove all hardware and glazing, unlock cabinet if lock provided.
2. Frame in above, below and at both sides of the cabinet opening. **Note:** On load bearing walls, the studs must be doubled on either side of the cabinet tub. If a stud must be cut to install the cabinet, a load bearing header must be installed above the cabinet tub.
3. Place cabinet in position and mark location of attachments on studding using 3/16" (5mm) holes as marking guides. Cabinet must be attached by at least 4 points, 2 of which must be in framing members.
4. Remove cabinet and drill 5/32" (4mm) holes through studs at marked points. Install plastic wall anchors in no more than 2 places if needed. For masonry walls, install expansion shields in wall at marked points.
5. Place cabinet in position and attach with Universal #10 x 2 1/2" (64mm) self-drilling screws.
6. Check cabinet door assembly for freedom of movement. If it binds, shim as necessary.
7. Remove protective plastic from plexiglass or glass and install decal if intended for glass. (Panorama Models Glazing is Pre-Installed)
8. Align glazing on inside of door, holding in place while installing glass mounting clips on inside of door. Do not over-tighten.
9. Install handle and roller catch or SAF-T-LOK™ in door.
10. Place fire extinguisher in cabinet. If provided, attach chain to hammer and attach to cabinet as indicated. Lock cabinet if lock provided.



JL INDUSTRIES

**ACTIVAR** INC.  
CONSTRUCTION PRODUCTS GROUP


**INSTALLATION—NON FIRE-RATED FIRE EXTINGUISHER CABINETS  
SEE SEPARATE INSTALLATION INSTRUCTIONS FOR FIRE-RATED CABINETS AND  
FOR TRIMLESS CABINET INSTALLATION**

© 2018 Activar Construction Products Group

**HEADQUARTERS & CUSTOMER SERVICE:** 9702 NEWTON AV S, BLOOMINGTON, MN 55431 **PH:** 800-554-6077 **FAX:** 952-835-2218 **EMAIL:** SALES@ACTIVARCPG.COM WWW.ACTIVARCPG.COM

**MANUFACTURING:** COMMERCE, CA & BLOOMINGTON MN **WAREHOUSES:** DALLAS TX, FORT MYERS FL, LANCASTER PA, ATLANTA GA, SEATTLE WA, OMAHA NE, FARGO ND 10/19/18

HINGED DOOR MODELS - EMBASSY FULLY RECESSED

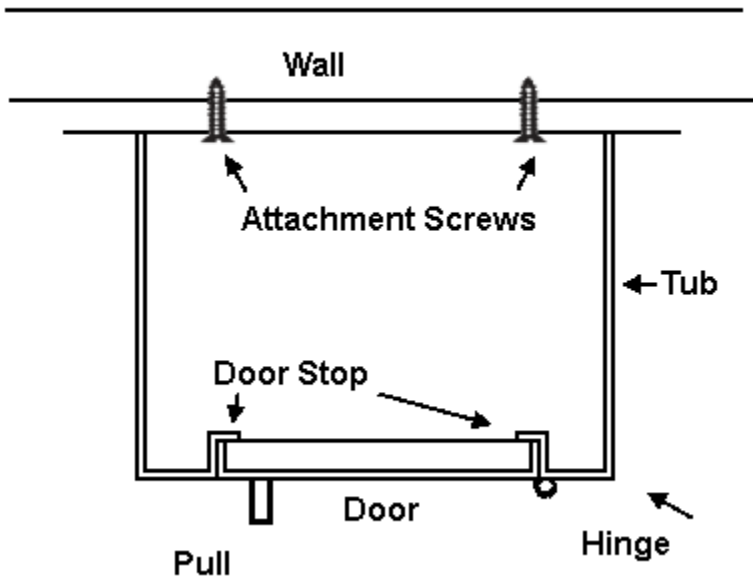

SEE SEPARATE INSTALLATION INSTRUCTIONS FOR FIRE-RATED CABINETS AND FOR TRIMLESS CABINET INSTALLATION

HINGED DOOR MODELS - SURFACE-MOUNTED

HINGED DOOR MODELS - RECESSED

