


INSTALLATION INSTRUCTIONS: FIRE-FX—FIRE RATED EXTINGUISHER CABINETS

1. With metal or wood studding, install a framed opening at specified location. Wall opening width, height and depth must correspond with dimensions indicated in catalog or detail and submittal sheet.
2. Frame in above, below and at both sides of cabinet opening.
NOTE: On load bearing walls, the studs must be doubled on either side of the cabinet tub. If a stud must be cut to install the cabinet, a load bearing header must be installed above the cabinet tub.
3. Drill 3/16" (0.5 cm) hole at least every 12" (30.48 cm) on each side of cabinet through the double tub construction for mounting into wall opening.
4. Place cabinet in position and mark location of attachments on studding using 3/16" (0.5 cm) holes as marking guides.
5. Remove cabinet and drill 5/32" (0.4 cm) holes through studs at marked points; six attachment holes for 2000 series cabinets and smaller, eight attachment holes for larger cabinets.
6. Place cabinet in position and attach with Universal # 10 x 2-1/2" (6.4 cm) self-drilling screws.
7. Check cabinet door assembly for freedom of movement. If it binds, shim as necessary to remove any racking of tub at attachments of studding.

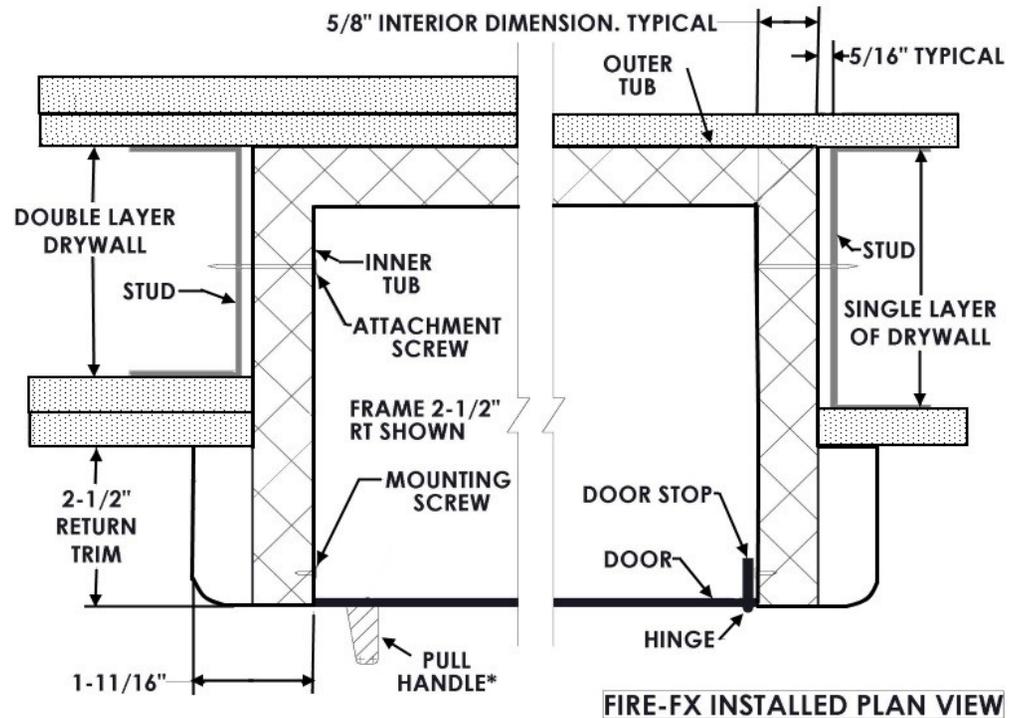

NOTE: The installation of any fire-rated cabinet which lacks a cabinet door, or any condition in which the door is left ajar, will void the fire rating

Fire-Rating: The recessed and semi-recessed Fire-FX™ cabinets are fabricated in accordance with the Warnock Hersey label for one and two hour combustible and non-combustible wall system building codes. The fire testing has met the requirement of the UBC standard 43-6 and ASTM-E814 for membrane and penetration firestops. Installation instructions must be strictly adhered to in order to obtain the fire rating.



JL INDUSTRIES

ACTIVAR
INC.

www.activarcp.com

Construction Products Group

INSTALLATION INSTRUCTIONS: FX—FIRE-RATED FIRE EXTINGUISHER CABINETS
COPYRIGHT 2015 - ACTIVAR

14I-100 REV 12-19-14

HEADQUARTERS & JL INDUSTRIES: 4450 WEST 78TH ST CIRCLE, BLOOMINGTON, MN 55435-5416 PH: 800-554-6077 FAX: 952-835-2218 EMAIL: SALES@ACTIVARCPG.COM WWW.ACTIVARCPG.COM
ACPG SOUTHEAST/THOMAS: FT MYERS, FL ACPG WEST COAST/SAMSON: COMMERCE, CA WAREHOUSES: DALLAS TX, LANCASTER PA, ATLANTA GA, CHICAGO, IL, SEATTLE WA, FARGO ND, OMAHA NE