

MINIBLINDS FOR VISION LITES - Standard

INSTALLATION & MAINTENANCE GUIDE | 14I-328

GENERAL:

Air Louvers Miniblind Series Vision Lite PAKs are the ideal solution to add privacy to doors. Available in the Slimline (VSIG) and EZline (VLFEZIG), featuring a professional look with self-attaching fasteners visible on the room side only.

The standard version includes a magnetic fingertip operator to raise, lower and tilt the miniblinds with standard color white and 10 standard sizes.

TOOLS NEEDED:

- Screwdriver with Phillips head - standard

INSTALLATION:

1. Read and follow the installation requirements of the door manufacturers.
2. Remove the temporary white plastic frame from the glass/ miniblind piece before installing.
3. Cut the hole in the door and prepare, if required, per the door manufacturer. The door cutout corresponds to the order size of the vision lite. Assure the opening is plumb and square.
4. Caulking, tape or compound can be applied to both sides of the frame/glazing interface. Air Louvers vision lites do not require glazing tape for installation, however, it is recommended to apply the standard glazing tape 1/16" (GTAPE 200B) to help protect against breakage caused by metal to glass contact.
5. Insert the corridor side frame in the cutout, squaring to door.
6. Insert miniblind unit into frame, seating firmly, using setting blocks as needed.
7. Inserting two of the screws provided in the countersunk holes, carefully align the room side of the frame to the holes in the corridor side of the frame. Screw in enough to hold frame in place for alignment, then insert the other screws lightly. Tighten the screws alternately in a criss-cross pattern to avoid putting more pressure on one side than the other. Tighten screws up to 15-25 inch-pounds, making sure not to deflect the vision lite frame.

OPERATION:


All models have a single fingertip raise, lower and tilt controller, which slides up and down on the edge of the unit. Operator mounts to internal mechanism magnetically. To re-engage the magnetic operator if the blinds don't move: Slide the operator all the way to the bottom, then slide it back up again. As it is sliding, there will be one "click", continue to slide, the second "click" re-engages the magnetics in the operator.

MAINTENANCE:


To clean the glass, use a soft cloth and glass cleaner; do not use abrasive cleaners containing corrosive solutions.



Standard Miniblinds

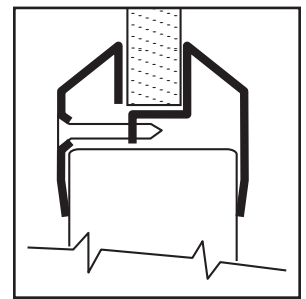

VSIG FRAME

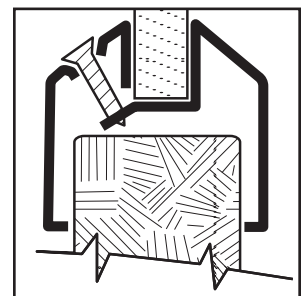

VLFEZIG FRAME



Slide to raise/lower and tilt for single control of the blinds



AIR LOUVERS

9702 Newton Ave S. Bloomington, MN 55431 | Many Locations Across North America



800-554-6077



sales@activarcpg.com



www.activarcpg.com

Installation & Maintenance Guide |
14I-328

REV A | 5-29-2025