



INSTALLATION INSTRUCTIONS: SUPPLEMENTAL ILLUSTRATION FOR FIRE RATED EXTINGUISHER CABINETS INTO MASONRY WALLS

FOR EXISTING CONSTRUCTION OR NEW CONSTRUCTION

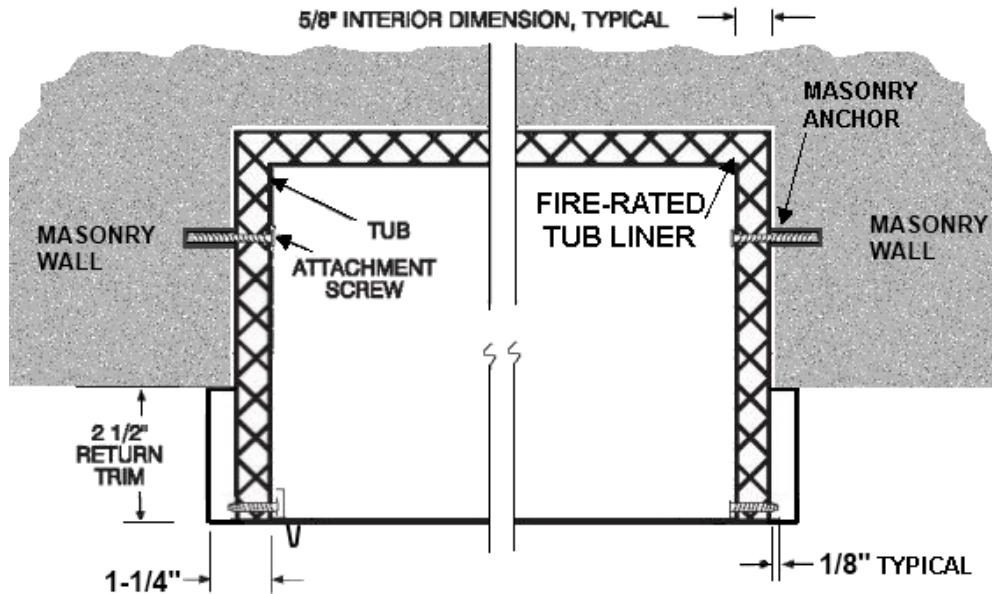

INSTALL SCREWS THROUGH BOTH TUBS INTO MASONRY ANCHORS
Fasten cabinet with a minimum of 4 screws per cabinet

SECURITY CABINETS ONLY*: MASONRY ANCHORS PROVIDED ON OUTSIDE TUB FOR NEW CONSTRUCTION ONLY

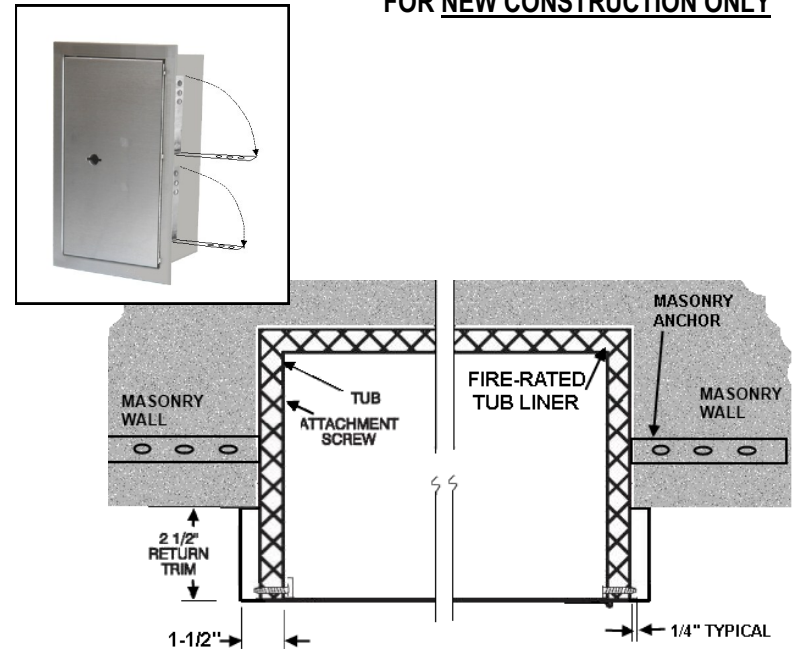

Extend masonry anchors provided, for installation in new masonry construction. Anchors are positioned 7-1/2" from each other for ease of installation into block walls.
Fire-rated tub is mechanically fastened to the inside tub—no need for additional hardware.



JL INDUSTRIES

ACTIVAR
INC.

Construction Products Group

www.activarcpg.com

ILLUSTRATION OF INSTALLATION INTO MASONRY WALL FOR FX-FIRE-RATED CABINETS—NTS

***NOTE: SECURITY CABINETS ARE EQUIPPED WITH MASONRY STRAPS ON OUTSIDE CABINET WHICH CAN BE USED TO MOUNT CABINET INTO NEW CONSTRUCTION.**

HEADQUARTERS & JL INDUSTRIES: 4450 WEST 78TH ST CIRCLE, BLOOMINGTON, MN 55435-5416 PH: 800-554-6077 FAX: 952-835-2218 EMAIL: SALES@JLINDUSTRIES.COM WWW.ACTIVARCPG.COM
ACPG SOUTHEAST (THOMAS ENTERPRISES): FT MYERS, FL ACPG WEST COAST (SAMSON): COMMERCE, CA WAREHOUSES: DALLAS TX, LANCASTER PA, ATLANTA GA, CHICAGO, IL, SEATTLE WA 2/12/14