


SURFACE-MOUNTED CABINETS

1. Place cabinet in position level to floor, and mark location of attachments on studding using 3/16" (5mm) holes as marking guides.
2. Remove cabinet and drill 5/32" (4mm) holes through studs at marked points. Install plastic wall anchors. For masonry walls, install expansion shields in wall at marked points.
3. Place cabinet in position and attach with Universal #10 x 2½" (64mm) self-drilling screws, or for masonry, appropriate screws for expansion shield.
4. Install handle in door (if provided).
5. Place fire extinguisher in cabinet

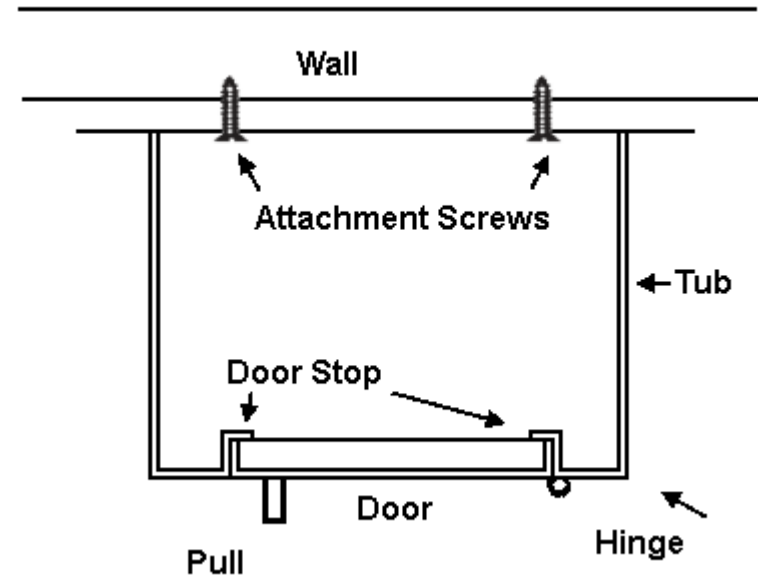

SEE PAGE 2 FOR RECESSED CABINET INSTALLATION



JL INDUSTRIES

ACTIVAR
INC.

www.activarcpg.com

Construction Products Group

INSTALLATION - NON FIRE-RATED FIRE EXTINGUISHER CABINET

HEADQUARTERS & JL INDUSTRIES::4450 WEST 78TH ST CIRCLE, BLOOMINGTON, MN 55435-5416 PH: 800-554-6077 FAX: 952-835-2218 EMAIL: SALES@JLINDUSTRIES.COM WWW.ACTIVARCPG.COM
ACPG SOUTHEAST (THOMAS ENTERPRISES):FT MYERS, FL ACPG WEST COAST (SAMSON): COMMERCE, CA WAREHOUSES: DALLAS TX, LANCASTER PA, ATLANTA GA, CHICAGO, IL , Seattle WA 2/11/14

RECESSED SECURITY CABINETS

NON MASONRY WALLS:

1. Frame in above, below and at both sides of the cabinet opening.

Note: On load bearing walls, the studs must be doubled on either side of the cabinet tub. If a stud must be cut to install the cabinet, a load bearing header must be installed above the cabinet tub.

2. Drill holes in sides of cabinet—at least 2 per side. Place cabinet in position, and mark position of holes on studs.
3. Remove cabinet and drill 5/32" (4mm) holes through studs at marked points. Install plastic wall anchors if required.
4. Place cabinet in position and attach with Universal #10 x 2 1/2" (64mm) self-drilling screws.
5. Install handle in door (if provided).
6. Check cabinet door assembly for freedom of movement. If it binds, shim as necessary to remove any racking.

MASONRY WALLS NEW CONSTRUCTION:

1. 2 masonry anchors are provided on each side of the cabinet spaced at 7-1/2" from each other. Install cabinets as masonry walls are constructed, extending the 7" anchors between courses, and filling voids with cement.
2. Check cabinet door assembly before cement hardens, and adjust as necessary to remove any racking.
3. Protect cabinet during construction.
4. Install handle in door (if provided).

MASONRY WALLS EXISTING CONSTRUCTION:

1. Drill holes in sides of cabinet—at least 2 per side. Place cabinet in position, and mark position of holes on wall.
2. Remove cabinet. Install masonry anchors to receive threaded screws.
3. Place cabinet in position, and attach with appropriate sized fasteners.
4. Install handle in door (if provided).
5. Check cabinet door assembly for freedom of movement. If it binds, shim as necessary to remove any racking.



Extend masonry anchors provided, for installation in new masonry construction.