

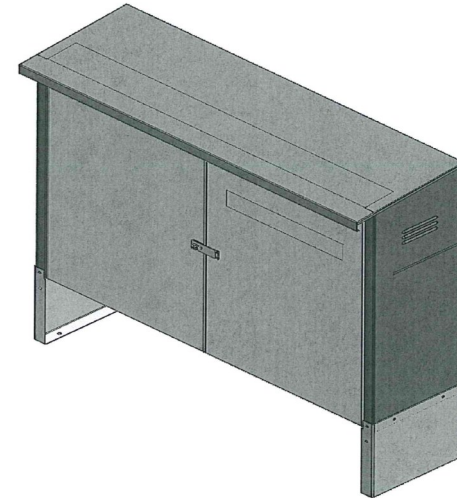


1. Lay the cabinet on it's back.
2. Position the legs so that the end without a flange fits over the bottom of the existing base of the cabinet.
3. Align the (4) holes on each leg with the holes on the cabinet base.
4. Attach with (4) bolts on each leg, 2 on the side, 1 front, 1 back.
5. A lip at the bottom of each leg provides a flange for mounting to the floor if desired.

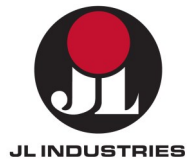

Mounting holes for screws (4) on each leg.

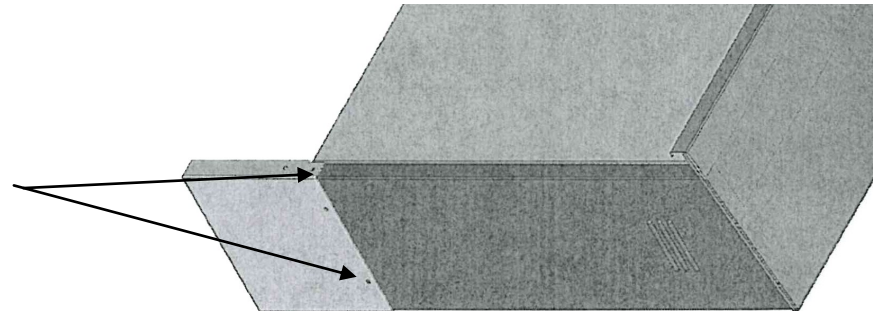

**ACTIVAR**  
INC.  
Construction Products Group

[www.activarcpg.com](http://www.activarcpg.com)

## INSTALLATION INSTRUCTIONS: FIRE HOSE EQUIPMENT CABINET LEGS

HEADQUARTERS & JL INDUSTRIES: 4450 WEST 78<sup>TH</sup> ST CIRCLE, BLOOMINGTON, MN 55435-5416 PH: 800-554-6077 FAX: 952-835-2218 EMAIL: [SALES@JLINDUSTRIES.COM](mailto:SALES@JLINDUSTRIES.COM) [WWW.ACTIVARCPG.COM](http://WWW.ACTIVARCPG.COM)  
ACPG SOUTHEAST (THOMAS ENTERPRISES): FT MYERS, FL ACPG WEST COAST (SAMSON): COMMERCE, CA WAREHOUSES: DALLAS TX, LANCASTER PA, ATLANTA GA, CHICAGO, IL, SEATTLE WA 12-18-12