


1. Read and follow the installation requirements of the door manufacturers.
2. Cut the hole in the door to correspond to the order size of the louver. Assure that the opening is plumb and square.
4. Insert one half of the louver into the cutout, make sure is centered, use this as a template to drill holes on the door for the thru bolts. Remove louver and make holes.
5. Insert both sides of the louver into the cutout and align with the holes. Use setting blocks as needed.
7. Insert the screws provided in the countersunk holes. Screw in enough to hold the louver in place for alignment, and then insert the other screws lightly. Tighten the screws alternately in a criss-cross pattern to avoid putting more pressure on one side than the other. Do not over tighten

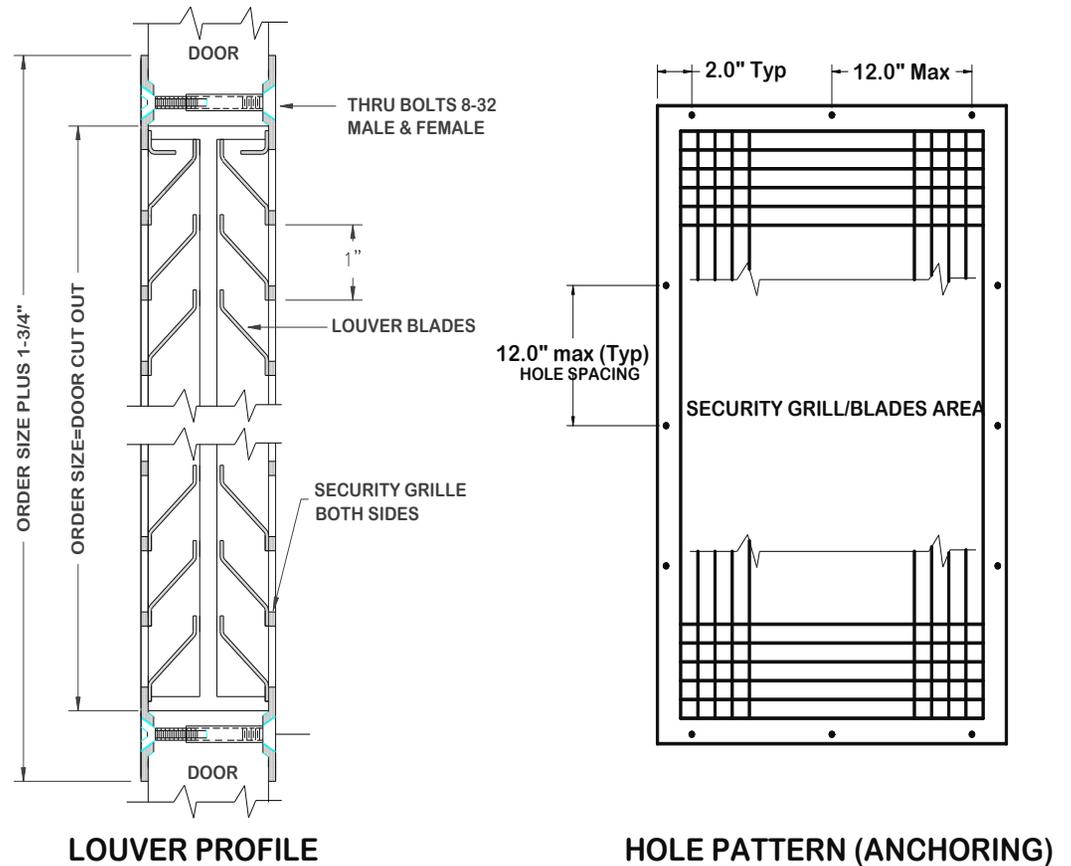

1500A-HR Listed Severe Windstorm Approved Louver
 Tested in Accordance with:
 ASTM E330, ASTM E1996, ANSI A250.13
 TAS 203, 201, 202, ASTM E 1886
 Impact (ft lb) 350
 DP Rating (PSF) 60



www.activarcpg.com

Construction Products Group

INSTALLATION INSTRUCTIONS FOR 1500AHRC LOUVER

HEADQUARTERS: 4450 WEST 78TH ST CIRCLE, BLOOMINGTON, MN 55435-5416 PH: 800-766-0660 FAX: 952-835-2218 EMAIL: SALES@AIRLOUVERS.COM WWW.ACTIVARCPG.COM
 ACPG WEST COAST (MANUFACTURING): COMMERCE CA • ACPG WAREHOUSES: LANCASTER PA, ATLANTA GA, CHICAGO IL, DALLAS TX, FORT MYERS FL, SEATTLE WA 141-306 REV A 10/12