


INSTALLATION INSTRUCTIONS: MINIBLINDS FOR VISION LITES: STANDARD SIZES


PG 1 OF 1

1. Read and follow the installation requirements of the door manufacturers.
2. Remove the temporary white plastic frame from the glass/miniblind piece before installing.
3. Cut the hole in the door to correspond to the order size of the vision frame. Assure that the opening is plumb and square.
4. Prepare the cutout if required, per the door manufacturers installation instructions.
5. Install caulking, tape or compound to both sides of the frame or both sides of glass using listed and approved material appropriate for the fire rating desired. (Air Louvers vision lites do not require glazing tape for installation, however, we recommend application of 1/16" polyethylene glazing tape to reduce breakage caused by metal to glass contact)
6. Insert the corridor side frame in the cutout, squaring to door.
7. Insert miniblind unit into frame, seating firmly, using setting blocks as needed.
8. Inserting 2 of the screws provided in the countersunk holes, carefully align the room side of the frame to the holes in the corridor side of the frame. Screw in enough to hold frame in place for alignment, then insert the other screws lightly. Tighten the screws alternately in a criss-cross pattern to avoid putting more pressure on one side than the other. Do not tighten to the point of deflecting the frame.

Cleaning the Glass: avoid contact with abrasive cleaners and solutions containing corrosive solvents or acid solutions. Clean using a soft cloth and glass cleaner.

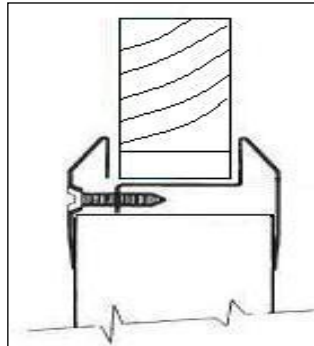

VSIG FRAME

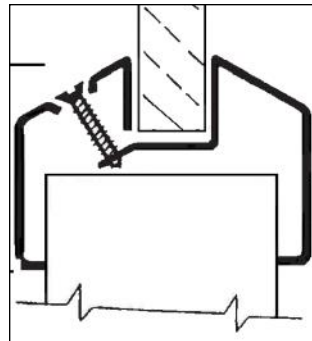

VLFEZIG FRAME



Slide to Raise/Lower & Tilt for Single Control

All models have a Single Fingertip Raise, Lower and Tilt Controller which slides up and down on the edge of the unit. Operator mounts to internal mechanism magnetically.

To re-engage the magnetic operator if the blinds don't move:

Slide the operator all the way to the bottom, then slide it back up again. As it is sliding, there will be one "click", continue to slide, the second "click" re-engages the magnetics in the operator.



AIR LOUVERS

INSTALLATION INSTRUCTIONS MINIBLINDS FOR VISION LITES: STANDARD SIZES

HEADQUARTERS: 9702 NEWTON AVE S, BLOOMINGTON, MN 55431 **PH:** 800-554-6077 **EMAIL:** SALES@ACTIVARCPG.COM WWW.ACTIVARCPG.COM

MANUFACTURING: BLOOMINGTON, MN & COMMERCE, CA **WAREHOUSES:** SEE WEBSITE FOR LOCATIONS

12/16/2022